 



BOOMCHAIR

3

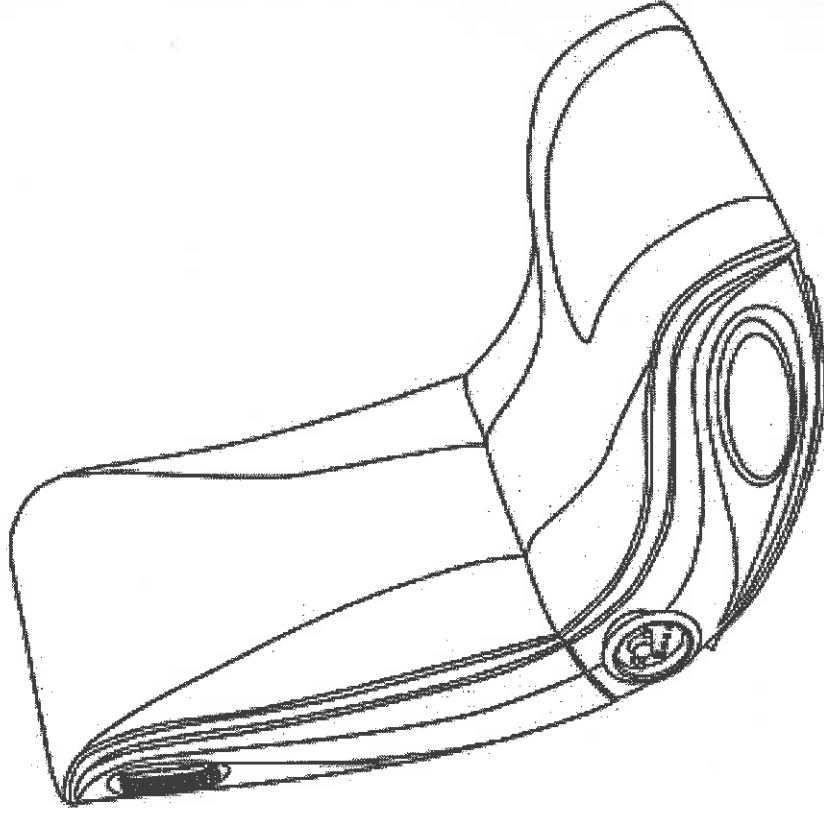


- C  M4 *45MM
1PC
- D  M4/1PC

 1

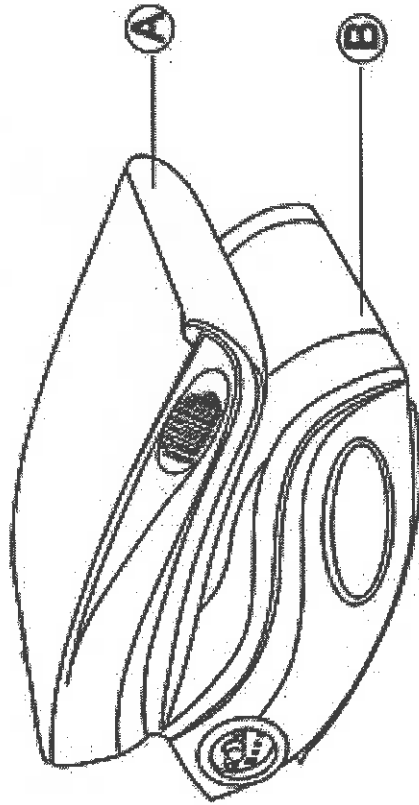

2

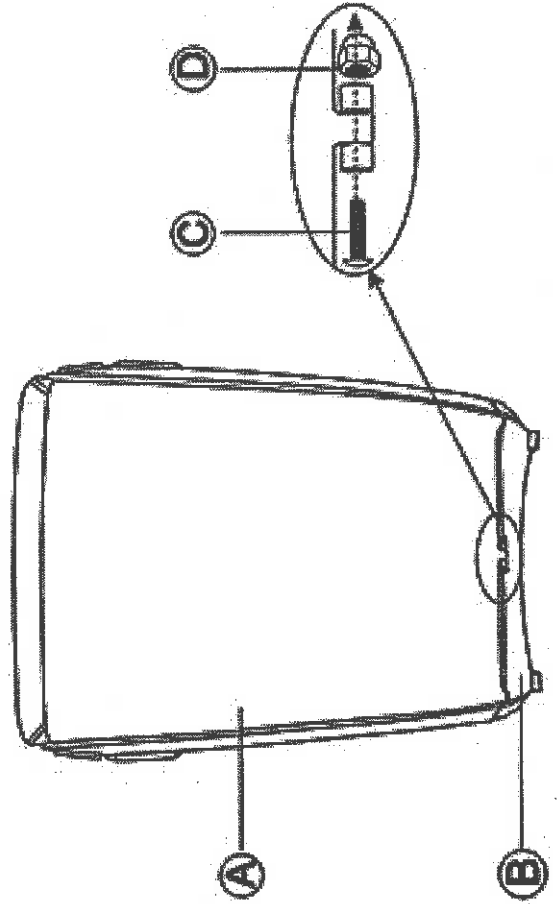 

BOOMCHAIR


don't just sit there...start rocking!

**Thank you for purchasing the BOOMCHAIR |
We know you will enjoy your BOOMCHAIR
experience as much as we do.**

**Welcome to the world of interactive audio. With your
new BOOMCHAIR you can now not only hear your
music but actually FEEL it. Whether you are listening
to music, watching a movie, or playing a game, you
will become a part of it.**

Get ready to experience sound as you never have!

 **Compatible with: PS2, PS3, XBox, 360, Cube, DS, Wii, PSP,
iPod, Mac, PC, TV, DVD & MP3 Players.**

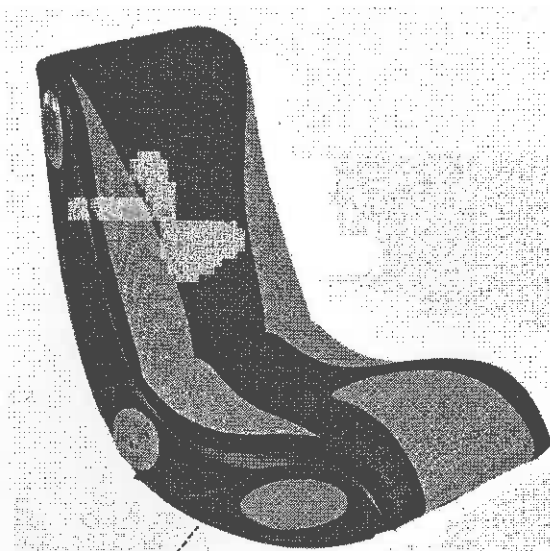

FEATURES

A-Control Panel

 
 
- A1-Power Indicator Light
- A2-Audio Input Jack
- A3-Audio Output for Linking Multiple Chairs
- A4-Volume Adjustment
- A5-Bass Volume Adjustment
- A6-Power On/Off
- A7-9V DC Power Input Jack
- A8-Headphone Plug in Jack

B-Accessories Supplied

- B1-3m RCA Stereo to 3.5mm stereo plug cable(1 PC)
- B2-INPUT:100-240V AC/50-60Hz
OUTPUT:9V DC1000mA 5.4W Main POWER Adapter
(EFFICIENCY LEVEL: Ⓢ115V)
- B3-0.15m RCA stereo female to 3.5mm stereo male cable (1PC)

C-Audio Specification

- Signal-to-Noise Rate(Amplifier): Satellite :>60dB
- Frequency Response: 350Hz~45kHz
- Distortion: Satellite: <1%(F=1kHz)
- Input: DC 9V/1.0A

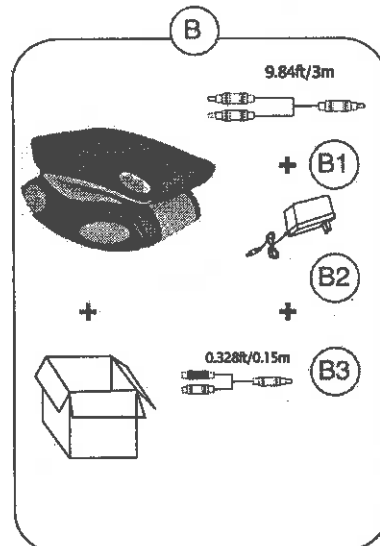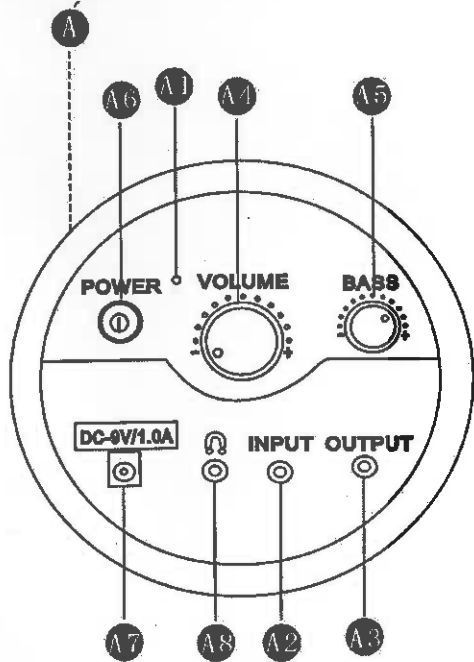

*Some features may vary, depending on model

FUNCTIONS:

- Foldable construction for ease of storage and portability.
- Ergonomic design with full back support.
- Side control panel with volume, bass control, and input/output jacks.

READ BEFORE USAGE:

- Always make sure velcro flap is attached before moving.
 - Always make sure velcro flap is attached before sitting in the chair.
 - Excessive use of audio equipment could lead to hearing loss.
 - Excessive sound pressure from earphones and headphones can cause hearing loss.
 - Children under the age of 13 should not use this product without adult supervision.
 - Strictly for indoor use. Do not expose to direct sunlight, moisture or extreme temperatures.
 - If cover becomes wet disconnect power immediately and don't use until completely dry.
 - Do not attempt to remove the cover or any components. Removal of the cover or tampering with components puts you at risk for injury or death from electrical shock.
 - The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
 - No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Please use the power adaptor which is provided by the manufacturer.



PICTURE OUT OF BOX



SITTING POSITION

SET UP:

1. Lift **BOOMCHAIR** out of box.
2. Keep the chair in the folded position and place it on the floor so that back side of the chair is facing up and the bottom of the seat is touching the floor.
3. Review the set up diagrams to familiarize yourself with the **BOOMCHAIR** components, accessories, and set-up.
4. Pull and secure the Velcro flap.
5. Unpack the power adapter and connect it to the main power outlet, then to the power jack on the control panel (A7).
6. Press the power button and confirm that the power indicator light (A1) is on.
7. Follow the connection diagrams. They show how to connect the **BOOMCHAIR** to the audio source of your choice.
8. Adjust the bass and volume levels to your preference---start rocking.

CONNECTION GUIDE

DIAGRAM 1 XBOX™, XBOX 360™, PLAYSTATION 3™ & Wii

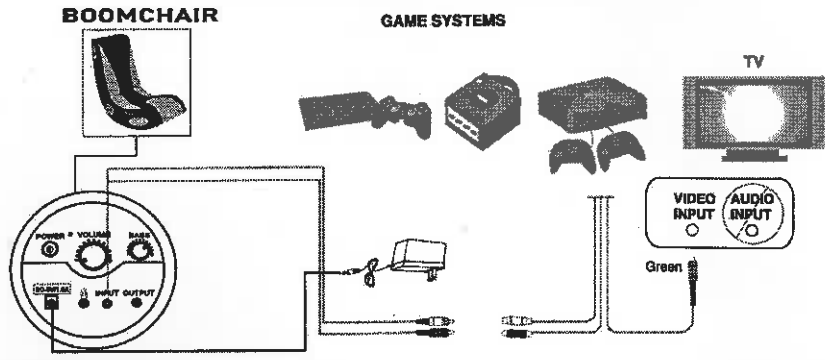 


DIAGRAM 2 HOME THEATER & SATELLITE

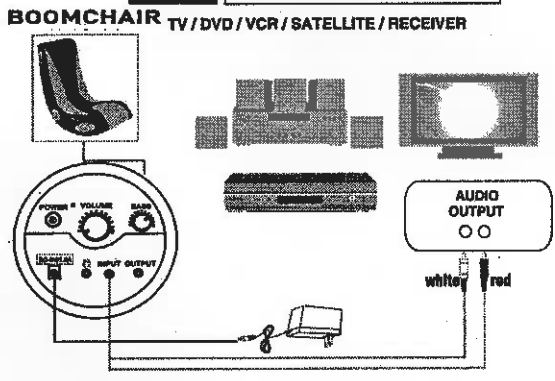 


DIAGRAM 3 PORTABLE DEVICES


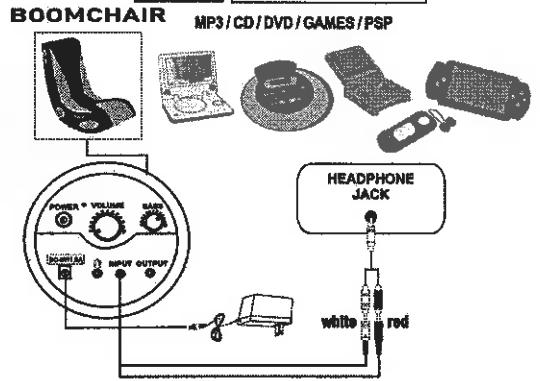 


DIAGRAM 4 MULTI-USER CONNECTION

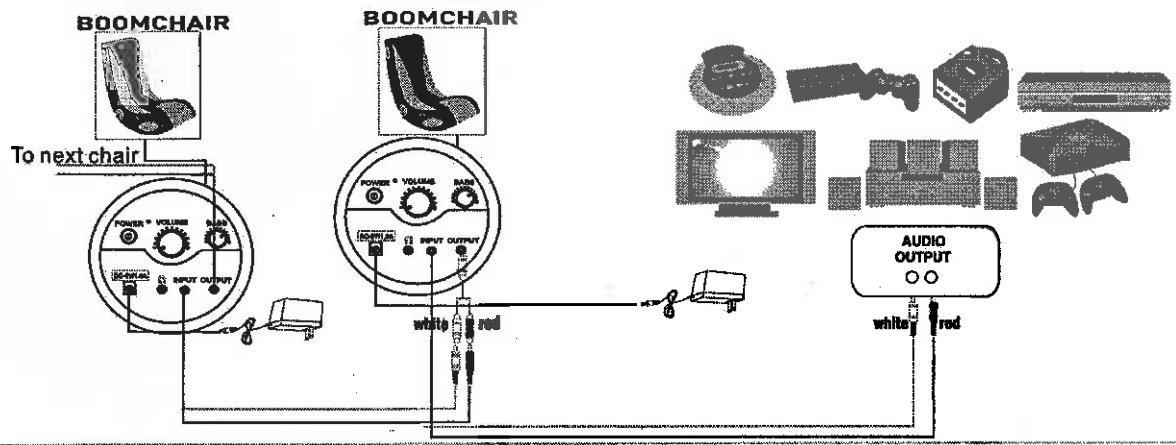 

TROUBLE SHOOTING

- Unable to connect to game console -

Most gaming consoles are shipped from the manufacturer with an Audio/ Video RCA cable. The A/V RCA cable has three RCA plugs: a video plug (yellow) and two audio plugs (red and white). If your gaming console came with an A/V RCA cable, please follow the instructions supplied by the game console manufacturer for setting up your gaming console and connecting it to the television. Please note that you must leave the red and white audio jacks on the A/V cable UNCONNECTED. Once the console is properly connected to your TV, please follow the diagram in the illustrated **BOOMCHAIR** Set-up guide to connect the gaming console to the **BOOMCHAIR**.

If your gaming console was shipped with a coaxial cable, instead of an A/V RCA cable, you must follow an alternate set-up procedure (coaxial cable is the same type of cable that is used to connect a VCR to the TV). You will quickly recognize if your gaming console uses this type of cable. It connects the gaming console directly to the television and carries both the audio and video signal over a single cable. If your gaming console uses a coaxial cable, you CAN NOT connect it directly to the **BOOMCHAIR**. Instead, you must

Use an intermediary A/V device (such as a TV, VCR, DVD, TiVO, etc) Please follow these steps:

- a. Connect your gaming console to the intermediary A/V device via the coaxial cable.
- b. Connect the **BOOMCHAIR** to the 'Audio Out' jack on the intermediary A/V device.
- c. Follow diagram 2 in the **BOOMCHAIR** Set-up guide to connect the **BOOMCHAIR** to the intermediary A/V device and finalize the setup.

If your gaming console is attached to an HD TV with an HDMI cable. You will need to connect the chair using either the audio out jacks on the back of the TV or by plugging into the headphone jack on the front of the TV.

- Unable to hear any sound from the **BOOMCHAIR**

1. Check to ensure that the power adapter is properly connected. When properly connected, the indicator light on the control panel should light up. If the indicator light does not light up, try to use another power outlet in your home.
2. Make sure the power unit is turned on and indicator light on the control panel is lit. If it is not, please press the power switch on the control panel.
3. Once you have successfully completed 1. and 2. please review the **BOOMCHAIR** illustrated set-up guide. Double check all audio connections. Finally, check that the volume on the hand remote is turned to an audible level on both the TV and the chair.

LUMISOURCE, LLC LIMITED WARRANTY

LIMITED WARRANTY: LumiSource, LLC ("LumiSource") warrants this product against defects in materials and workmanship for a period of ninety (90) days from the date of original consumer purchase. If a covered warranty claim is timely made, LumiSource, LLC will, at its sole discretion: (a) repair the product, using new and/or refurbished replacement parts or (b) replace the product with an identical (or comparable) product, without charge to you other than the initial shipping cost to return the product. LumiSource, LLC will only pay return shipping charges for destinations within the 48 contiguous U.S.A., if the returned product is covered by the limited warranty.

WHAT THIS WARRANTY DOES NOT COVER: This warranty does not cover defects resulting from accidents, alterations, unauthorized repair, failure to follow instructions, misuse, commercial use, fire, flood, or acts of God.

WHAT WE ASK YOU TO DO: If there is a covered defect, please write or email us within 90 days of the date of purchase at the address noted below to obtain instructions and authorization to return the product to LumiSource, LLC. You will need to pack the product securely in packaging providing at least the degree of protection of the original carton and packing materials and ship it to us at your expense. You will also need to include with the product (a) a copy of your original proof of purchase (retail receipt) showing the date of purchase and (b) a detailed explanation of the problem(s) requiring service.

TO THE EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE EXTENT PERMITTED BY LAW, LUMISOURCE, LLC HEREBY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT APPLICABLE STATE LAW EXCLUDES SUCH DISCLAIMERS, THEN TO THE EXTENT ALLOWED BY LAW, THE TIME FOR ANY CLAIMS FOR SUCH IMPLIED WARRANTIES SHALL EXPIRE 90 DAYS FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. TO THE EXTENT PERMITTED BY LAW, LUMISOURCE, LLC IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF TIME, INCONVENIENCE, LOSS OF USE OF YOUR PRODUCT, OR PERSONAL INJURY OR PROPERTY DAMAGE, CAUSED BY YOUR PRODUCT OR ITS FAILURE TO WORK.

This limited warranty gives you specific legal rights. Some states do not allow the exclusion or limitation of incidental or consequential damages, and applicable law may not permit the exclusion of certain implied warranties. You may also have other rights, which vary, from state to state.

LumiSource.llc

2950 Old Higgins Road, Elk Grove Village, IL 60007

E-mail: customerservice@lumisource.com

Phone: 1-888-461-5864 (toll free)

Phone: 1-847-699-8988 (international)

www.BoomChair.com • www.LumiSource.com

© 2011 LumiSource, LLC. All rights reserved. BoomChair® and the Boom logo are trademarks of LumiSource, LLC. Other trademarks are properties of their respective owners. The design of this product is a trade dress of LumiSource, LLC. Patents pending. Actual contents may differ slightly from those pictured. Made in China. Distributed by LumiSource, LLC, 2950 Old Higgins Road, Elk Grove Village, IL 60007. www.lumisource.com.

This product is not manufactured or distributed by Microsoft® the owner of the trademark Xbox™. This product is not manufactured or distributed by Nintendo® the owner of the trademark GameCube™ and DS™. This product is not manufactured or distributed by Sony® the owner of the trademark Playstation™ PS3™, PS2™, and PSP™. iPod™ is a registered trademark of Apple Computer, Inc. All Rights Reserved.